

SR1317



 
Scan for video instructions.

To register your warranty, visit
seriousreaders.com/warranty

For advice. For help. For repair:


+44 1296 390 390
seriousreaders.com

15 Faraday Road | Aylesbury | Bucks,
HP19 8RY | Great Britain

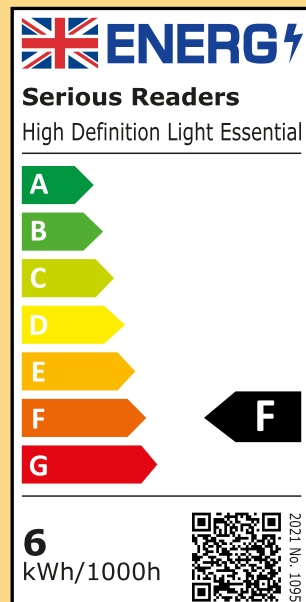

High Definition Light *Essential*

 Instructions

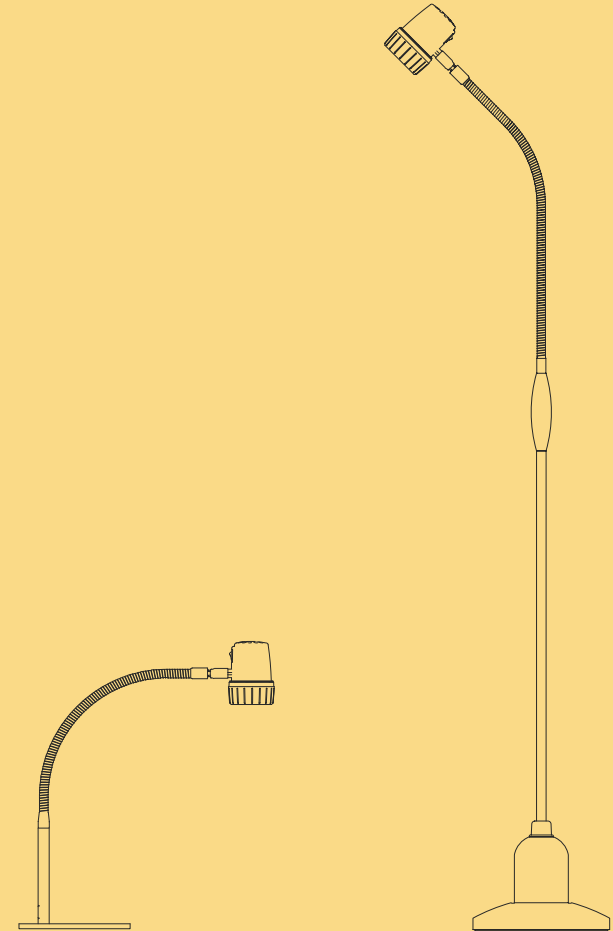


Keep for reference



High Definition Light *Essential*

Getting Started

Your light is ready to plug in and use. The standby switch is located on the head of the light. If the switch has 0/1 markings, the light is not dimmable. A blank switch indicates the light is dimmable.

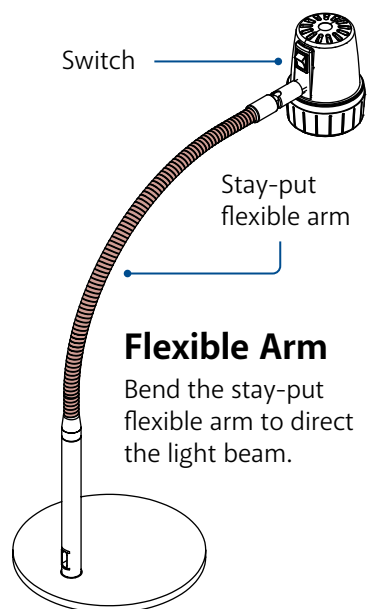

Flexible Arm


Bend the stay-put flexible arm to direct the light beam.

Safety

Cord replacement Type X. Please contact us if there is any cable damage. Do not attempt a repair. **Indoor use only.**

Standby Mode


When plugged into mains power, the light stays in standby mode, ready for use. Use the switch on the head to turn it on or put it back into standby. It draws a small amount of power while in standby.

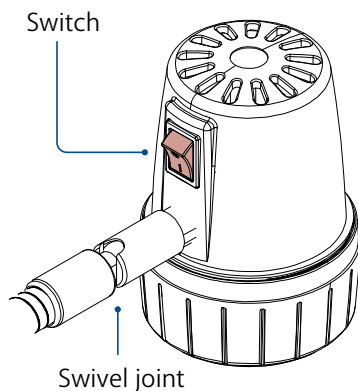

Model Shown:
Lightweight Table.

Swivel Joint

For fine positioning of the light beam.

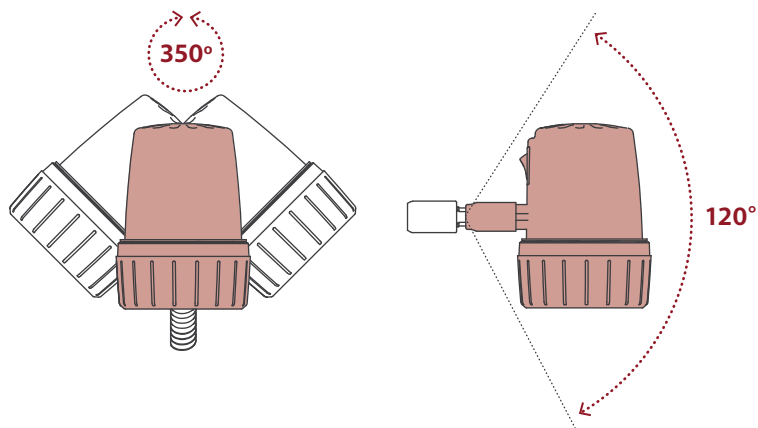


High Definition Light *Essential*

Dimmer

Quickly press the switch to turn the light on and off. To change the brightness, press and hold the switch. The light will get dimmer, then brighter. Let go when you reach the brightness you want.

Unplugging the lamp will reset the brightness to its highest setting.


A blank switch indicates the light has a dimmer

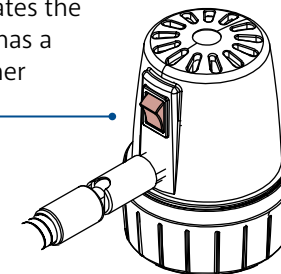

Changing the Bulb

Disconnect from power and allow to cool. Unscrew the ribbed front shade by rotating it anti-clockwise.

Pull out the two-pinned bulb. **Do not twist it.** Insert the new bulb. Screw the shade clockwise back onto the lamp head.

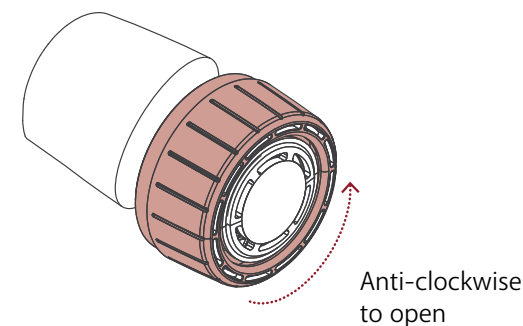

Changing the Driver and Plug

The plug-in driver is detachable. The plug-type is also interchangeable to fit international sockets.

